



REMOTE CONTROL OPERATION

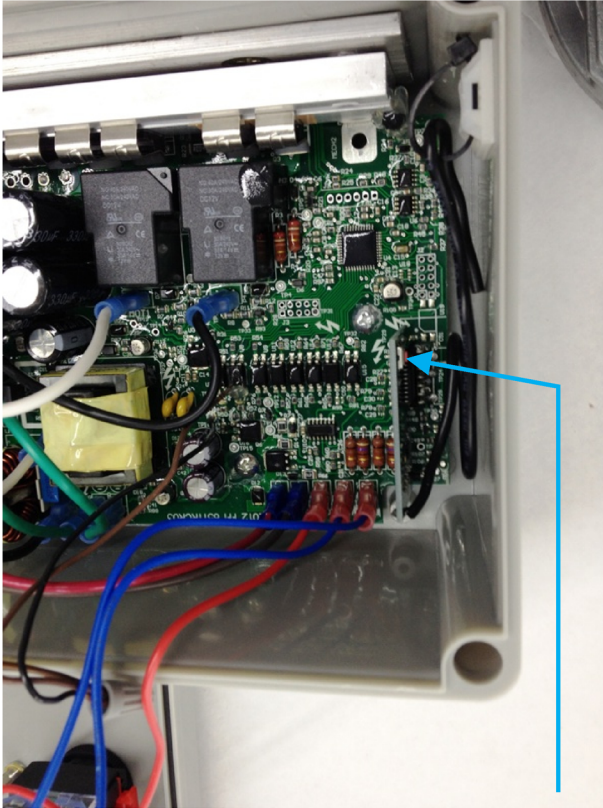

Programming
Button

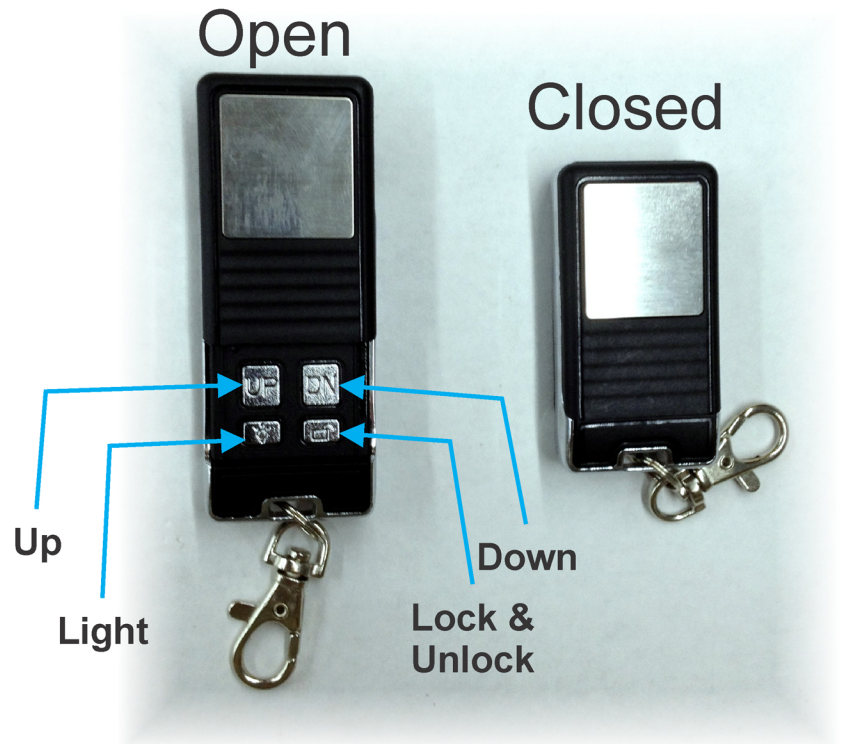

Remote Reprogramming Instructions

- 1...Power up the unit.
- 2...Remove 4 plastic screws on cover of the control box.
- 3...On the electrical board you will find a button (next to the red light)
- 4...Push the button-a red light will appear and stay solid color.
- 5...Push up button on fob, red light will flash.
- 6...Release remote button and push remote again. Motor should start.
Repeat for both remotes..

DANGER-CAUTION STAY AWAY FROM ALL OTHER ELECTRICAL PARTS

If you have any questions about the use of the remote control, please call us at 866-319-8877.

www.lifttechmarine.com