


Porta Dock Installation Guide

* DANGER - CAUTION *

Always Lower The Boat Lift Before Attempting Assembly.




- 1. Lower the Boat Lift.
- 2. Remove the Wheel.
- 3. Remove the Brake Cover.

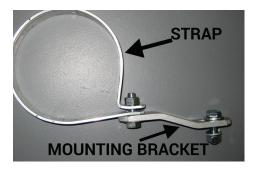

6. Install the Strap and Mounting Bracket onto the Motor Prior to Installation. Leave the Bolts Loose. (Slotted end of Mounting Bracket faces out)



In Case of a Power Outage This Tool May be Inserted Into a Drill to Raise or Lower Your Lift. First Remove Rubber Cap From Motor Shaft.

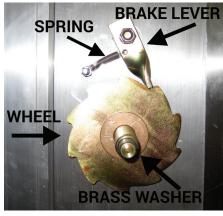


4. Remove the Brake Lever, Spring, Brass Washer and the Gold Wheel. (You Will Not be using these parts with your new Motor.)



7. Slide the Motor down onto the Spline. Install the Bolt and Washer onto the Motor and Tighten to Approximately 70 Foot Pounds.



5. Install the Brake Cover. Install the Spacer and the Spline Shaft.

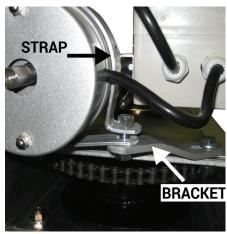

8. Attach the Bracket to the Unit and Tighten all Bolts.

Recommended Extension Cords up to 150 feet 12/3.

Any question regarding electrical current requirements please call your Authorized Dealer or Lift Tech Marine 1-866-319-8877.

* DANGER - CAUTION *

All Power Used on Your Dock or Lift Needs to be GFI Protected at the Shoreline.