


High and Dry Installation Guide


* DANGER - CAUTION *

Always Lower The Boat Lift Before Attempting Assembly.


- 1. Lower the Boat Lift.
- 2. Remove the Wheel. Spins Off Counter Clockwise.
- 3. Remove the Two Bolts on the Front Cover.
- Remove the Brake Lever.
- If you have a Brass Washer Remove it.
- 6. Install the Fiber Disc Over the Shaft. Put Cover Back On.
- 7. Install the Spline on the Shaft. Install Both Spacer Collars on the Spline. Install the Winch Bracket.
- 8. Slide Motor Onto Shaft.
- 9. Install the Motor Strap and Bracket as Shown. Install Bracket to Winch Bracket.
- 10. Install the Bolt & Washer onto the Motor and Tighten to Approximately 70 Foot Pounds.

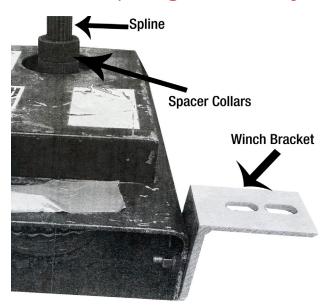



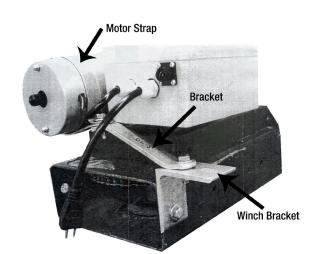

In Case of a Power Outage This Tool May be Inserted Into a Drill to Raise or Lower Your Lift. First Remove Rubber Cap From Motor Shaft

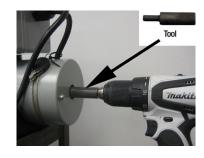

Recommended Extension Cords up to 150 feet 12/3.

Any Question Regarding Electrical Current Requirements Please Call Your Authorized Dealer or Lift Tech Marine 1-866-319-8877. WWW.LIFTTECHMARINE.COM

* DANGER - CAUTION *

All Power Used on Your Dock or Lift Needs to be GFI Protected at the Shoreline.