



ShoreMate Installation Guide

* DANGER - CAUTION *

Always Lower The Boat Lift Before Attempting Assembly.

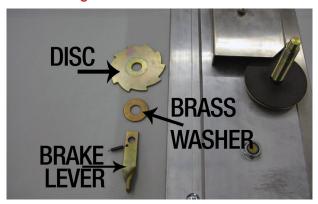

- 1. Lower the Boat Lift.
- 2. Remove the Wheel.
- 3. Remove the Brake Dog, Brass Washer & the Brake Lever. You Will Not be Using Them Any Longer.

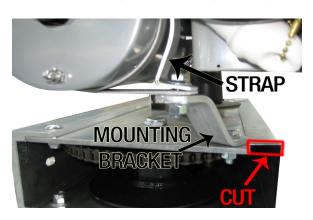

- 6. Install the Strap and Mounting Bracket as Shown.
- 7. Cut Tin Cover if Needed.



- 4. Install the Spline and Collar as Shown.
- 5. Slide the Motor Down onto the Spline.



8. Install the Black Bolt & Washer onto the Motor and Tighten to Approximately 70 Foot Pounds.

In Case of a Power Outage This Tool May be Inserted Into a Drill to Raise or Lower Your Lift. First Remove Rubber Cap From the Motor Shaft.



Any Question Regarding Electrical Current Requirements Please Call Your Authorized Dealer or Lift Tech Marine 1-866-319-8877. WWW.LIFTTECHMARINE.COM





