



## Wheel Drive Shore Station Installation Guide

**\* DANGER - CAUTION \***


**Always Lower The Boat Lift Before Attempting Assembly.**

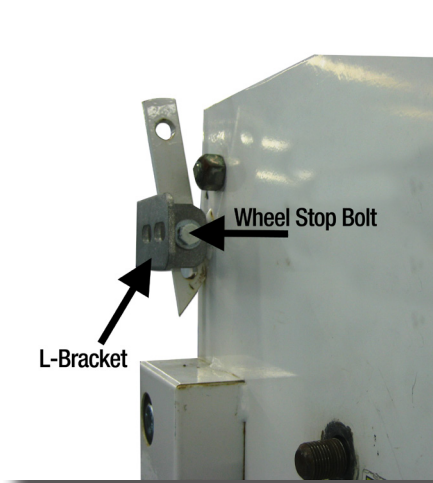

1. Mount L Bracket On Wheel Stop Bolt. Shore Station L Bracket is Included in the Kit Marked SS.

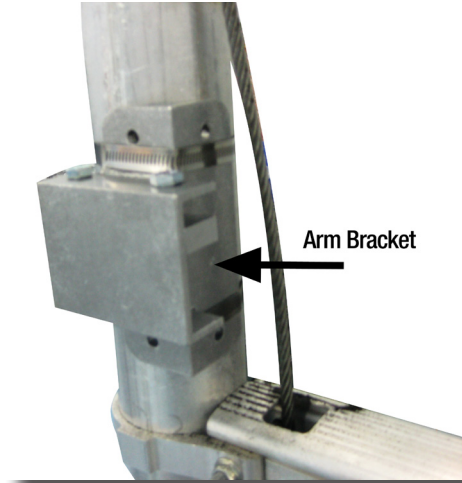

2. Mount Arm Bracket as Shown Between Winch and Winch Tube.

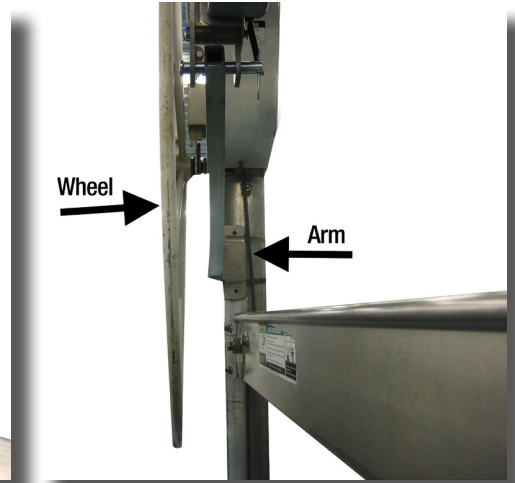

3. Align Arm Parallel to Wheel.



4. Typical Lift Tech Wheel Drive Mount On a Shore Station.

**Plug in and Enjoy!**

Recommended Extension Cords up to 150 feet 12/3.

Any question regarding Electrical current requirement please call your authorized dealer or Lift Tech Marine 1-866-319-8877.

**\* DANGER - CAUTION \***

**All power used on your dock or lift needs to be GFI protected at the shore line.**